



# Safe Isolation

## Product Offers



**TRUE Complete Safe Isolation Kits**

**NAPIT**  
associate member

**SELECT**

Scan to complete your  
Safe Isolation CPD



t: 01274 752 407 e: sales@tis-tic.co.uk

**testinstrumentsolutions.co.uk**



All prices are exclusive of VAT at the current rate.

## TIS 819 SIKIT

### Voltage Only Complete Safe Isolation Kit

Kit Contains:

- TIS 819 Voltage Tester 12V - 690V AC / DC
- TIS PU1 Proving Unit
- TIS PUK Dual Instrument Pouch
- TIS BKIT Lockout Kit inc. Hasp, Padlocks, Tag, etc

Trade Price £157.50

**Now Only  
£95.00**



**TRUE Complete Safe Isolation Kits**

## TIS 850 SIKIT

### Voltage & Continuity Complete Safe Isolation Kit

Kit Contains:

- TIS 850 Voltage & Continuity Tester
- TIS PU1 Proving Unit
- TIS PUK Dual Instrument Pouch
- TIS BKIT Lockout Kit inc. Hasp, Padlocks, Tag, etc

Trade Price £185.00

**Now Only  
£115.00**



**TRUE Complete Safe Isolation Kits**

## TIS 851 SIKIT

### Voltage & Continuity Complete Safe Isolation Kit

Kit Contains:

- TIS 851 Voltage & Continuity Tester
- TIS PU1 Proving Unit
- TIS PUK Dual Instrument Pouch
- TIS BKIT Lockout Kit inc. Hasp, Padlocks, Tag, etc

Trade Price £205.00

**Now Only  
£128.00**



**TRUE Complete Safe Isolation Kits**

## TIS 849 SIKIT

### Voltage & Continuity Complete Safe Isolation Kit

Kit Contains:

- TIS 849 1000V AC/DC Digital Voltage & Continuity Tester
- TIS PU1 Proving Unit
- TIS PUK Dual Instrument Pouch
- TIS BKIT Lockout Kit inc. Hasp, Padlocks, Tag, etc

Trade Price £264.00

**Now Only  
£163.95**



**TRUE Complete Safe Isolation Kits**



## TIS 859 SIKIT

### Voltage & Continuity Complete Safe Isolation Kit

Kit Contains:

- TIS 859 1000V AC/DC Digital Voltage & Continuity Tester
- TIS PU1 Proving Unit
- TIS PUK Dual Instrument Pouch
- TIS BKIT Lockout Kit inc. Hasp, Padlocks, Tag, etc

Trade Price £275.00

**Now Only  
£172.00**



**TRUE Complete Safe Isolation Kits**

## TIS 8000 SIKIT

### Open Jaw Current & Voltage Multi Tester Complete Safe Isolation Kit

Kit Contains:

- TIS 8000 Open Jaw Current & Voltage Tester
- TIS PU1 Proving Unit
- TIS PUK Dual Instrument Pouch
- TIS BKIT Lockout Kit inc. Hasp, Padlocks, Tag, etc

Trade Price £349.00

**Now Only  
£235.00**



**TRUE Complete Safe Isolation Kits**

## TIS 819

### Voltage Tester 12 - 690 Volts AC / DC

- Voltage Range: 12, 24, 50, 120, 230, 400 & 690 Volts
- Automatic Polarity Indication
- Frequency Range 0-60Hz
- IP 54 & Shock proof
- Conforms to BSEN 61243-3:2014
- Conforms to H.S.E. GS 38
- Works without batteries
- CAT III 600V & CAT IV 300V

Trade Price £30.50

**Now Only  
£21.50**



**TRUE Complete Safe Isolation Kits**

## TIS 850

### Voltage/Continuity Tester with Phase Rotation

- AC/DC Voltage: 0V - 690V, LED 12V - 690V
- CAT III 1000V, CAT IV 600V
- Will Not Trip RCDs when connected Live to Earth
- Loud Continuity Buzzer
- 2 Pole Phase Rotation Test
- LCD and LED Voltage Indication
- Single Pole Live Side Test
- Compliant with BSEN61243-3-2014
- Compliant with GS 38 HSE
- Auto Power On / Off
- Low Battery Warning
- Complete with Padded Case



Trade Price £52.50

**Now Only  
£33.95**



## TIS 851

### Voltage/Continuity Tester Built in Proving Test

- AC/DC Voltage: 0V - 690V, LED 12V - 690V
- CAT III 1000V, CAT IV 600V
- Will Not Trip RCDs when connected Live to Earth
- Built in Proving Test
- Loud Continuity Buzzer
- 2 Pole Phase Rotation Test
- LCD and LED Voltage Indication
- Single Pole Live Side Test
- Compliant with BSEN61243-3-2014
- Compliant with GS 38 HSE
- Auto Power On / Off
- Low Battery Warning
- Complete with Padded Case



Trade Price £93.50

**Now Only  
£45.50**



## TIS 8000 Open Jaw Current & Voltage Multi Tester

- LED/ LCD Measurement
- Voltage Measurement: 1000V AC, 1500V DC
- Current Measurement: 200A AC
- Leads are Replaceable (See TIS 8000L)
- Can Be Used For Safe Isolation
- With Appropriate Proving Unit
- In Accordance With IEC 61243-3:2014
- Phase Rotation, Continuity Test, Diode Test
- Non Contact Voltage Detector
- Resistance Measurement
- Frequency Measurement
- Torch Light
- Self Test (Voltage & Continuity)
- Duty Cycle
- Low Battery Warning
- Auto Power Off
- Fork Opening 14mm
- IP64 Protection
- Compliant to IEC 61243-3:2014,
- IEC 61010-1:2010
- CAT IV 600V, CAT III 1000V
- GS38 Compliant (With Removable Tip Covers)



Trade Price £219.00

**Now Only  
£133.95**

## TIS 829

### Replacement Test Lead Set for the TIS 849 & TIS 859

Trade Price £19.00

**Now Only  
£13.95**



## TIS 8000L

### Replacement Lead Set for the TIS 8000

Trade Price £33.00

**Now Only  
£24.75**





## TIS 849

**1000V AC/DC LCD, LED, Audible & 'Shaker' Voltage & Continuity Tester, TRMS with in-built Voltage Detector, 30mA RCD Leakage Path Test & RST 3-Phase Rotation Detection**

- Removable and fully replaceable shuttered test leads (TIS 829)
- Built in non-contact and contact voltage detector with signal strength indication
- Trms sensing of voltage on noisy and distorted circuits
- Indicates by LED with or without battery power up to 1000V AC / DC
- Will not trip RCDs even when testing with or without battery power
- Conforms fully with HSE GS38
- RST, 3 phase rotation detection
- Low battery warning
- Built in backlight and flashlight
- Complete with padded carrying case and batteries
- Audible continuity function with LED indication
- 30mA RCD Test button
- LCD and LED 1000V AC/DC indication of Voltage
- ACV frequency response 45Hz - 65Hz
- IP65 rated, in compliance with BSEN 61243-3: 2014
- Shaker, vibration to indicate presence of voltage
- Audible LED and LCD indication of continuity



**CAT III  
1000V**

**CAT IV  
600V**

Conforms to  
BSEN 61243-3:  
2014

Trade Price £135.00

**Now Only  
£92.00**



## See our online video demonstration

Simply scan the QR code to the right  
or search for **'Test Instrument Solutions'** on YouTube.



## TIS 859

**1000V AC/DC, LED, Audible & 'Shaker' Voltage and Continuity Tester with Built-in Non-Contact/Contact Voltage Detector, 30mA RCD Test & RST 3-Phase Rotation Detection, Trms with Built-in Resistance & Capacitance**

- Removable and fully replaceable shuttered test leads (TIS 829)
- Trms sensing of voltage on noisy and distorted circuits
- Indicates by LED with or without battery power up to 1000V AC / DC
- Built in non-contact and contact voltage detector with signal strength indication
- Will not trip RCDs even when testing with or without battery power
- ACV frequency response 45Hz - 65Hz
- IP65 rated, in compliance with BSEN 61243-3: 2014
- Conforms fully with HSE GS38
- Low battery warning
- Complete with padded carrying case and batteries
- Audible continuity function with LED indication
- 30mA RCD Test button
- LCD and LED 1000V AC/DC indication of Voltage
- Built in backlight and flashlight
- RST, 3 phase rotation detection
- Shaker, vibration to indicate presence of voltage
- Audible LED and LCD indication of continuity
- Resistance range 1.99Ω, 19.99Ω, 199.9kΩ, and 1000kΩ
- Capacitance range 199.9μF and 1999μF



**CAT III  
1000V**

**CAT IV  
600V**

Conforms to  
BSEN 61243-3:  
2014

Trade Price £163.00

**Now Only  
£115.00**



## TIS PU1 Proving Unit

- Compliant to GS38
- Proves all voltage testers 6V - 690V
- Low Battery Warning LED
- Built in On / Off Switch
- Ideal for use with TIS 819, 849, 850, 851, 859 & 8000
- Uses 6 x AA Alkaline (supplied)

Trade Price £90.00

**Now Only  
£65.00**



## TIS PUK Dual Instrument Pouch

Trade Price £20.00

**Now Only  
£14.95**



## TIS 15 Small Test Instrument Pouch

Trade Price £11.00

**Now Only  
£7.95**



## TIS 1100 R2, R1 + R2 Socket Adapter

Our TIS 1100 is a must have accessory for any electrician who carries out testing. It eliminates the need to remove the faceplate of the socket from the wall when testing R2, R1 + R2, saving valuable time and expense. The adapter also allows voltage testing from the socket, without having to open the 'shutters' of the wall socket.

Trade Price £24.00

**Now Only  
£17.00**



EN: 61010-1



## TIS BKIT Safety Lockout Kit

Trade Price £41.00

**Now Only  
£29.50**

Kit Contains:

- Lockout Pouch
- Lockout Hasp
- Lockout Padlock
- Pin Out MCB Lockout
- Pin In MCB Lockout
- MCB Lockout-Red
- Writing Pen For Tags
- Lockout Tag



Full Range of Accessories available

## TIS EKIT Safety Lockout Kit

Trade Price £61.00

**Now Only  
£45.00**

Kit Contains:

- Lockout Pouch
- Lockout Dielectric Hasp
- Dielectric Lockout Padlock
- Pin Out MCB Lockout
- Pin In MCB Lockout
- MCB Lockout-Red with Thumb Screw
- Writing Pen For Tags
- Lockout Tag



Full Range of Accessories available



# Range of Safe Isolation Accessories

## TIS TAG

Pack of 10 Lock off Tags



Trade Price £8.50

**Now Only £6.95**

## TIS PEN

Pack of 2 Pens



Trade Price £8.50

**Now Only £6.95**

## TIS UL3

Universal 3 Phase Lock



Trade Price £8.50

**Now Only £6.95**

## TIS NT1

No Tool MCB Lock



Trade Price £13.00

**Now Only £10.95**

## TIS MCCBL

MCCB Locking Device




Trade Price £18.95

**Now Only £15.95**

## TIS CB1

Simple Circuit Breaker Lockout

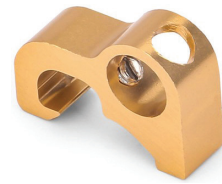

Trade Price £7.50

**Now Only £5.99**

## TIS PO

MCB Pin Out



Trade Price £9.50

**Now Only £8.00**

## TIS PI

MCB Pin In



Trade Price £9.50

**Now Only £8.00**

## TIS NH1

Nylon Hasp



Trade Price £7.50

**Now Only £6.25**

## TIS SH1

Steel Hasp



Trade Price £7.90

**Now Only £6.65**

## TIS LY1

Yellow Steel Lock



Trade Price £14.00

**Now Only £11.50**

## TIS LR1

Red Steel Lock



Trade Price £14.00

**Now Only £11.50**

## TIS LB1


Blue Steel Lock



Trade Price £14.00

**Now Only £11.50**

# 12 Easy steps to safe isolation

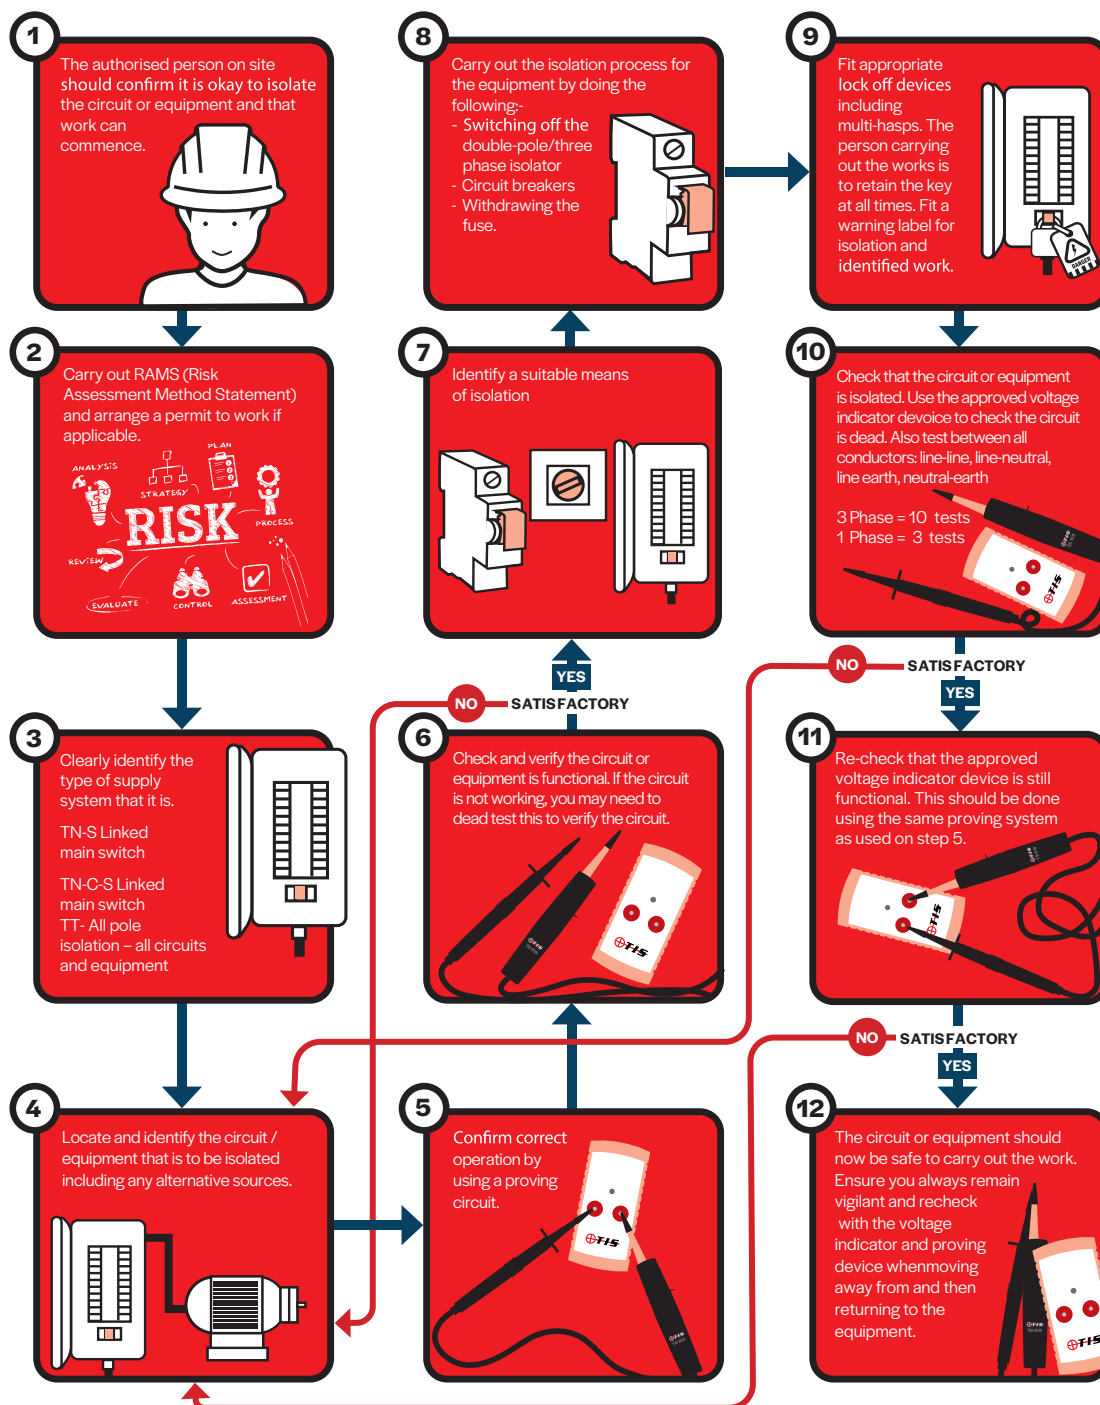

## Process for re-energising the circuit/system/equipment

**Step 1** - After completing the work, inspect and test it in accordance with part 6 BS7671 (Dead tests).

**Step 2** - Cancel any permits that were issued and remove any locking off devices, locks and labels and then restore the electrical supply.

**Step 3** - Complete live tests testing and commission the circuit equipment.

**Step 4** - Complete and issue the appropriate test certificate and/or reports.

Distributed by:



**Test Instrument Solutions**

Unit 12, 14 & 15 Luddite Way Business Park  
Rawfolds Way, Rawfolds, Cleckheaton, BD19 5DQ

t: 01274 752 407 e: sales@tis-tic.co.uk

**testinstrumentsolutions.co.uk**

Scan to complete your  
Safe Isolation CPD

